

# **PL91/92 Pilot Regulator**

The BelGAS<sup>CP</sup> PL91/92 is a pneumatic pilot regulator designed to be used in conjunction with a control valve. This pilot regulator is designed to withstand the severely corrosive mediums associated with the oil and gas industry. The PL91 is an indirect acting pilot regulator that is designed to be paired with a pressure closing control valve. The PL92 is a direct acting pilot regulator that is designed to be paired with a pressure opening control valve.

# **Applications**

- Separators
- Liquid Level Controls
- Scrubbers
- Wellheads

#### **Features**

- Single Adjusting Screw: Changing the set point of the unit's performance is possible by rotating the adjusting screw.
- Accurate and Proportional Control: Each turn on the adjustment screw results in a known change of the signal pressure set point. Each change in the signal pressure results in a proportional change in the output pressure.
- Remote Installation: Pipe the unit as close to or as far away as needed from the control
  valve it is driving.
- Field Reversible: Change an indirect operating unit to direct operating without removing the unit from the field.

### **Materials of Construction**

Part	Material
Bellows Assembly	Stainless Steel
Bonnet	Steel
Diaphragm	Nitrile or Fluorocarbon
Lower Housing	Steel or Stainless Steel
Main Body & Supply Body	Steel or Stainless Steel

#### **Dimensional Data (in.)**

Mounting Options	A	В	C	ØD
Mounting Bracket	11.1	4.1	1.4	4.0
Pipe Mount	12.2	5.2	2.5	4.0

#### Figure 1 Mounting Bracket Pipe Mount 1/4" NPT 1/4" NPT 1/4" NPT 1/4" NPT Inlet & Vent Inlet & Vent Outlet Port Port Outlet Ports **Ports** Α 1/8" NPT Vent Port В C C 1/4" NPT ØD Sense Ports ØD

**Specifications** 

Supply Pressure		20 or 30 PSIG		
Media		Liquid or Gas		
Configurations		Direct or Indirect Action		
Mounting Options		Mounting Bracket or Pipe Mount		
End Connections		1/4" NPT		
Temperature	Nitrile	-40 to 180°F (-40 to 82.2°C)		
	Fluorocarbon	0 to 300°F (0 to 148.9°C)		
Sensitivity/Adjustment		125-1500 PSIG		
Sense/Output Pressure Change		1 PSIG		
Set Point Change		40 PSIG Per Turn		


#### **PL91/92 Part Number Matrix**

PL9		0	02			00		150
Style								
Indirect Action	1							
Direct Action	2							
Port Size								
1/4" NPT			02					
End Connections								
Mounting Bracket				В				
Pipe Mount				P				
Body Material								
Steel					1			
Stainless Steel					5			
Seat Material								
Nitrile							0	
Fluorocarbon							2	
Pressure Range								
75-500 PSIG								050
75-700 PSIG								075
125-1500 PSIG								150



# PL91/92 Parts List & Repair Kits

Item	Desc	rintion	Qty.	Part Number
	Description Adjustment Screw-750 & 1500 PSIG		1	648-586-000
1	Adjustment Screw-750 & 1500 PSIG		1	648-586-002
	Stool		1	634-185-001
2 Hex Nut		Stainless Steel		634-185-000
3	Washer Stainless Steel		1	662-236-003
4*	Thread Seal		1	662-245-000
5	Bonnet		1	604-280-000
J	Donner	Steel	ı	638-098-000
6	Upper Spring Plate	Stainless Steel	1	638-098-001
7*	Thrust Washer-500,		2	662-234-003
9	Range Spring	730 (313001 310	1	655-793-000
- 3	mange opining	Steel		638-099-000
11	Lower Spring Plate	Stainless Steel	1	638-099-001
12	Bonnet Breather P		1	639-144-000
13	Seat Housing	lug	1	629-268-001
10	Diaphragm	Steel		634-222-000
14	Nut	Stainless Steel	2	634-222-000
15	Relief Diaphragm S		1	654-174-000
10	Relief	Steel	I	638-100-000
16	Diaphragm Plate	Stainless Steel	1	638-100-001
	Diapili agili Fiate	Steel		664-458-000
17	Supply Body	Stainless Steel	1	664-458-001
	Relief	Nitrile		618-116-000
18*		Fluorocarbon	1	618-116-001
	Diaphragm	Steel		
19	Stem	Steel Stainless Steel	1	689-025-000
		Nitrile		689-025-001 649-000-005
20*	0-ring	Fluorocarbon	3	
21*	Relief Seat	Fluorocarbon	1	649-000-137 688-077-001
22*			1	813-053-000
23*	Pilot Plug		1	650-197-000
23"	Orifice Seat	Stainless Steel	I	655-786-000
24*	Orifice Spring	Inconel®	1	655-786-001
	Name and Constant	Nitrile		
25*	Non-relieving	Fluorocarbon	1	618-118-000
	Diaprhagm	riuorocarbon		618-118-001
	Non-relieving	Steel		654-198-000
26	Diaphragm	0, 1, 0, 1	1	054 400 004
	Spacer	Stainless Steel		654-198-001
	Non-relieving	Steel		638-097-000
27	Diaphragm	0.001	1	000 007 000
	Plate	Stainless Steel	'	638-097-001
	Lower	Steel		629-265-000
28	Housing	Stainless Steel	1	629-265-001
	Housing	Steel		639-148-000
29	Breather Plug	Steel Stainless Steel		639-148-001
30	Bellows Assembly		1	713-000-001C
30			I	
21	Main Body	Steel	,	664-459-000
31	for Mounting	Stainless Steel	1	664-459-001
	Bracket	Otalilless Steel		100-001

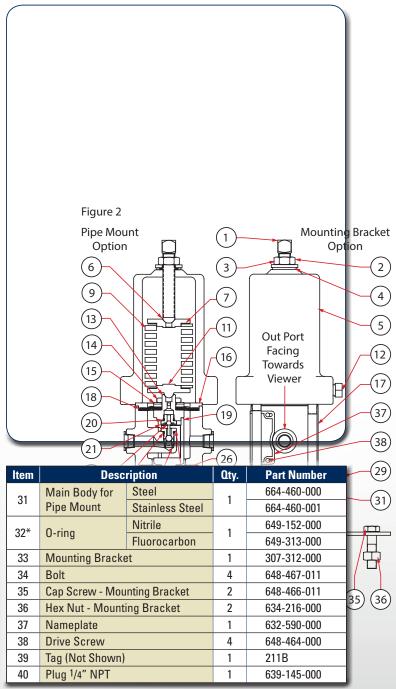

<sup>\*</sup>Parts Included in Repair Kit

Repair Kits				
Seat/Body Material	Qty.	Part Number		
Nitrile/Steel		971-L91-000		
Nitrile/Stainless Steel	1	971-L91-001		
Fluorocarbon/Steel	1	971-L91-002		
Fluorocarbon/Stainless Steel		971-L91-003		



Trusted. Proven. Better.

8019 Ohio River Blvd. Newell, WV 26050 Toll Free: 800-727-5646 sales@belgas.net www.BelGASCP.com 2221 SE 69th Street Oklahoma City, OK 73149 Toll Free: 800-833-3127